



NAVIGATOR

HEADPHONES



USER GUIDE

VOLUME LIMITED + NOISE CANCELLATION + BLUETOOTH
BLUETOOTH + À VOLUME LIMITÉ + ANNULATION DE BRUIT


OVERVIEW

Moki Navigators are designed to keep you and your little ones happy while travelling the globe or popping down the street. With a volume limit of 89dB you can relax with the knowledge that they won't be causing themselves permanent hearing damage by listening at volumes considered too high for too long.

The noise cancellation feature in Moki Navigators has been specifically tuned to be most useful for children, whether it be blocking the low frequency noise from aircraft engines or the drone of car tyres from the backseat when travelling city streets. Moki Navigators are rechargeable via USB, so there is no need to buy batteries. The included 3.5mm cable allows use with audio devices without Bluetooth, such as aircraft entertainment systems. Combine those features with great sound and an extended playtime of over 50 hours and you have the safest most appropriate headphone for kids ever made. Ideal for use by young frequent travelers or anyone who might use headphones in traditionally noisy environments and wish to protect their hearing.

Power-efficient Bluetooth V4.1 and Active Noise Cancellation (ANC) processing dampens the influence of ambient low frequency noise by -14dB. Quality 40mm neodymium drivers extend all audible frequencies to produce a richly detailed sound stage. Oversize soft padded earcups help with noise reduction through passive isolation, and ensures Moki Navigator Headphones will comfortably last the distance on extended trips with minimal hearing fatigue.


Supplied with a 3.5mm audio cable and dual-pin adaptor for use with in-flight systems + a lightweight Moki AirMesh bag to help keep everything together.

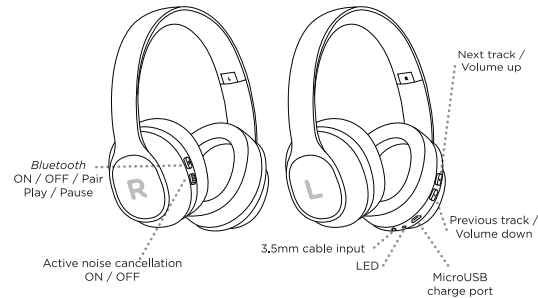

- WHEN OFF:**
HOLD 1 SEC - POWER ON
HOLD 3 SECS - ENTER PAIRING MODE
- TAP - DECREASE VOLUME
HOLD 2 SECS - RESTART TRACK
HOLD AGAIN - PREVIOUS TRACK
- TAP - INCREASE VOLUME
HOLD 2 SECS - NEXT TRACK
- ACTIVATES NOISE CANCELLATION**
- WHEN ON:**
TAP - PLAY/PAUSE
DOUBLE TAP - REDIAL LAST # CALLED
HOLD 3 SECS - POWER OFF

CONTENTS

- Moki Navigator Headphones
- MicroUSB Recharge Cable
- 3.5mm - 3.5mm Audio Cable
- Airline Adaptor
- Carry Bag
- User Guide

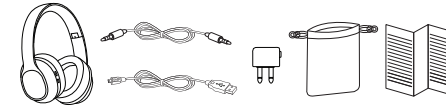

CHARGING

Please charge headphones before first use

Connect the supplied charge cable to a USB port on a PC or USB charge adaptor. Confirm orientation and connect the microUSB to the port on your headphones.

The LED on the headphones will glow solid RED indicating the headphones are charging. Depending on the power of the charge port used, charge time will be around 2 - 3 hours.

When headphones are fully charged the LED will turn off. Disconnect charge cable.

Note: Headphones will not operate if charge cable is still connected.



FOR USE ON AIRPLANE

Connect the supplied 3.5mm audio cable to the 3.5mm headphone jack on your headphones (see Overview diagram for location). Connect the other end of the audio cable to the provided airline adaptor. You can now connect the two-pin airline adaptor to the two-pin airplane port.



PAIR WITH BLUETOOTH DEVICES

You must pair your Moki headphones with a **Bluetooth** device before it can be used wirelessly.

You only need to pair your headphones to each play device once. They should automatically reconnect to each device when turned on in their vicinity. If two or more devices are available, the last device paired will be the one that reconnects.

FIRST TIME USE / PAIR TO NEW DEVICE

On your *Bluetooth* play device go to
• "Settings" >> "Bluetooth" - turn on *Bluetooth*

Play device should automatically start searching for new play devices. (Some players may require you to select "search for / add new device")

• With the headphones off, HOLD the "Play / Pause" button for about 8 seconds until the LED starts blinking RED / BLUE which indicates it is now searching for a new *Bluetooth* device

(If headphones do not pair with a new device within 90 seconds they will enter "Standby mode")

• On your phone or play device under "*Bluetooth*" you will see **MOKI NAVIGATOR** listed under "Available devices"

• Select **MOKI NAVIGATOR** on your device to pair your headphones (older devices may require a code to complete pairing. Enter "0000" if requested)

• When pairing is successful the LED on your headphones will slowly blink BLUE

Moki Navigator Headphones may be paired to PCs and laptops with *Bluetooth* capability. Go to your computer's *Bluetooth* settings and follow the prompts to connect in a similar way as described above. After pairing ensure the "Sound Output" is set to "Play through *Bluetooth*", (not "Internal Speakers"). Some computers may require *Bluetooth* audio output to be enabled each time you connect.

SPECIFICATIONS

Speaker drivers: Ø40 mm
Impedance: 32Ω
Sensitivity: 89dB ±3dB @1KHz
Frequency response: 20Hz - 20kHz
Bluetooth version: V4.1 + EDR
Range: 10 m
Maximum noise reduction: -14dB
Noise reduction range: 30-700Hz

Battery Life:
With ANC on only: 85 hours
With *Bluetooth* on only: 27 hours
With *Bluetooth* & ANC on: 23 hours
Standby time: Up to 250 hours
Charging time: 2-3 hours