 


Airflo

INSTRUCTION MANUAL

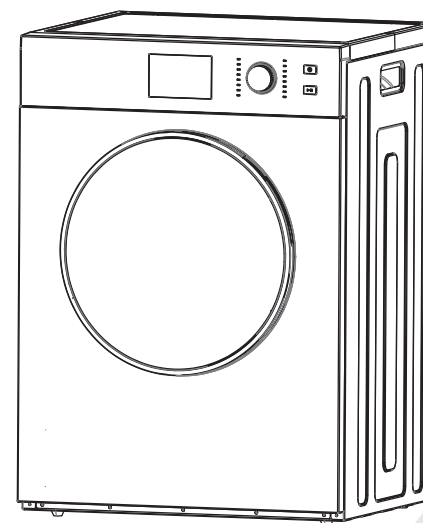

Auto Tumble Dryer
Model no. AFD728



Read this manual carefully and keep for future reference



Safety Information

- 1) This Tumble Dryer is a front loading machine.
- 2) This Dryer has a simple and convenient operation with the help of a PCB board.
- 3) Its big-sized window enables a clear view of the drying operation.
- 4) The Tumble Dryer's door opens at a 180 degree angle, making it convenient to transfer clothes.
- 5) Anti-dust, anti-humidity, anti-shake, long life and low noise design.
- 6) The Tumble Dryer is not to be used with industrial chemicals.
- 7) The Lint Filter should be cleaned frequently.
- 8) Lint must not be allowed to accumulate around the Tumble Dryer.
- 9) There should be adequate ventilation where you place the Tumble Dryer to avoid the back flow of air/gas in the room, to prevent any accidents.
- 10) Do not dry unwashed items.
- 11) Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, and wax or wax removers should be washed in hot water with an extra amount of detergent before before being dried in the Tumble Dryer.
- 12) Items such as foam rubber (latex), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam and rubber pads should not be dried in the Tumble Dryer.



Warning: Risk of fire / Flammable materials



 
- 13) Fabric softeners, or similar products, should be used as specified by the fabric softener's instructions.
- 14) The final part of the Tumble Dryer's cycle (the cool down cycle) occurs without heat to ensure that the items are left at a temperature that will not damage clothes.
- 15) *Warning:* To prevent burns or accidents, never stop the Dryer before the end of the drying cycle unless all items are quickly removed and spread out for the heat to dissipate.
- 16) Discharged exhaust air from the Tumble Dryer should not be anywhere near any other appliance, gas or other fuel.
- 17) Place the Dryer where its door can easily and fully open.
- 18) Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a Tumble Dryer. Always have this in mind when placing items in the Dryer and make sure no oil/fuel gets in the Dryer to prevent any fire hazard.
Tip: Any item with oil and its other by-products should first be washed in hot water with extra detergent.
- 19) The appliance should not be overturned during normal use or maintenance.
- 20) Remove all objects from pockets such as lighters and matches.



- 21) This appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance should not be made by children without supervision.
Children of less than 3 years should be kept away unless supervised.
- 22) Never obstruct the Dryer's ventilation openings.
- 23) If the power cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid any hazard.
- 24) This appliance is for indoor use only.



Parts

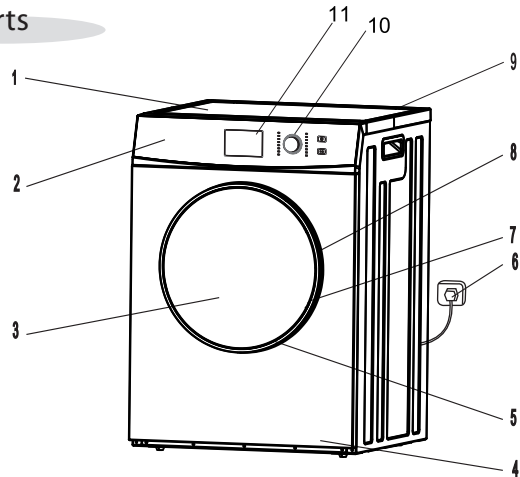


- | | | |
|------------------|------------------|--------------------|
| 1. Topboard | 5. Filter | 9. Reset button |
| 2. Control panel | 6. Power lead | 10. Program knob |
| 3. Door | 7. Door lock | 11. Display screen |
| 4. Cabinet | 8. Tumbling drum | |

Installation before use

Step1: Power source and grounding

 The dryer employs alternative current with the rated voltage and frequency. A special power socket for the dryer should be set aside for safety and convenience. The socket's method of connection is as the figure below:

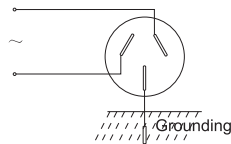
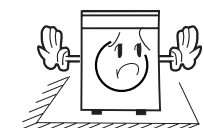 





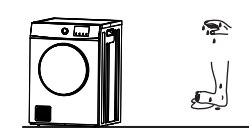 





 Notices:

The socket and grounding wire must be installed by an electrician to prevent incorrect installation and to guarantee the safety and correct use of the appliance. The power wire of the dryer employs a Y connection. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid any hazard. There should be no connection between the grounding wire and the neutral wire, otherwise the cabinet will be charged which may likely cause electric shock.



Step2: Precautions

<p>◆ Do not store or install the dryer where it will be exposed to water or the weather. If unavoidable, please dry the dryer before each use.</p> 	<p>◆ Position the Dryer in a well ventilated area for better air circulation and to prevent any hazards.</p> 
<p>◆ It is advisable to wring or squeeze out excess water from clothes before placing them inside the Dryer.</p> 	<p>◆ Do not spray combustible aerosols near the Dryer during use. If accidental spray occurs, do not touch the plug or the Start/Pause button.</p> 
<p>◆ Do not dry any clothes that are contaminated with combustible (gas, methylated spirits) materials</p> 	<p>◆ Do not operate the Dryer if damaged, malfunctioning, partially disassembled or has missing or broken parts.</p> 
<p>◆ Note that the Dryer will be warm to touch, especially its back side. Keep children away.</p> 	<p>◆ Make sure that your hands and feet are not wet when handling or using the machine.</p> 

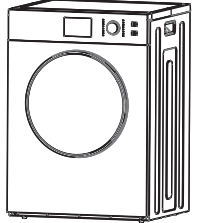 
<p>◆ Do not place any heavy or hot items on top of the Dryer to avoid deforming or ruining its body</p> 	<p>◆ Avoid placing raincoats or items containing rubber or elastic materials.</p> 										
<p>◆ To avoid scalding, do not open the dryer door until the program has completed.</p> 											
<p>Items with the following markings should not be dried in this Dryer:</p> <table border="0"> <tr> <td data-bbox="268 1101 358 1181"></td> <td data-bbox="414 1109 504 1181"></td> <td data-bbox="560 1109 649 1181"></td> <td data-bbox="705 1109 795 1181"></td> <td data-bbox="862 1109 952 1181"></td> </tr> <tr> <td data-bbox="235 1189 392 1220">Not used for dryer in the tub</td> <td data-bbox="403 1189 515 1220">Hang for dry</td> <td data-bbox="560 1189 638 1220">Drip dry</td> <td data-bbox="705 1189 795 1220">Flat dry</td> <td data-bbox="840 1189 985 1220">Dry automatically</td> </tr> </table>							Not used for dryer in the tub	Hang for dry	Drip dry	Flat dry	Dry automatically
Not used for dryer in the tub	Hang for dry	Drip dry	Flat dry	Dry automatically							



Installation

Step 1:

 Your Tumble Dryer should be placed in a well ventilated area with no less than 10 cm distance from the wall. If placed in a room such as a bathroom, it is suggested that there are no obstacles of 1.5m in front and is kept ventilated.

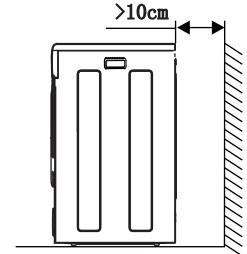

Step 2: The horizontal adjustment

Make sure that your Tumble Dryer is level. Use a spirit level.



Notice:

If the Dryer is not level, the Dryer will not operate correctly and will likely end up damaged.

Notice when installing:

- Do not install the Dryer outdoors or where it can easily be damaged by water.
- Do not place the Dryer (especially the back of the Dryer) near any curtains or other obstacles.
- Do not place the dryer near gas or flammable materials.



Operation

1. Prepare clothes for Drying

- Wash clothes and wring out excess water before putting it in the Dryer
- Sort out clothes from heavy to light and place in Dryer in different loads. (Heavier clothes take longer to dry and light-weight, shorter.)
- Make sure buttons and the like are safe in high temperature, otherwise it may damage the Dryer's inner tube. Make sure the clothes are protected from damage as well.
- It is advisable to turn clothes inside out.
- Check clothes after washing. If there is dirt on clothes, the drying process cannot be relied on to remove said dirt.
- Ensure that the power plug is properly connected and the supply cord is in good condition.

2. Check filter

- Make sure the filter is well cleaned and in the right position.
- Filter must be cleaned regularly.

3. Place clothes in the Dryer


- For faster results, it is better to fill the Dryer only by a half or two-thirds capacity. Note that clothes need space to circulate evenly.
- When drying big clothes, it is better to includes several small items to help balance the load.
- When drying delicate or small clothes (less than 1.5 kg), it is better to add several towels with fibers that do not fray. This will help dry the clothes more evenly.
- To avoid creases on clothes (or static electricity), do not over dry.



The reference weight of dry clothing

Mixed-fabric clothes (about 800g)	Jacket (about 800g cotton)	Jeans (about 800g)	Towel quilt (about 900g cotton)
Single bedsheet (about 600g cotton)	Work clothes (about 1120g)	Sleepwear (about 200g)	Long sleeve shirt (about 300g cotton)
Short sleeve shirt (about 180g cotton)	Short pants (about 70g cotton)	Socks (about 50g mixed-weave)	

 4. Close the Dryer door and review control panel

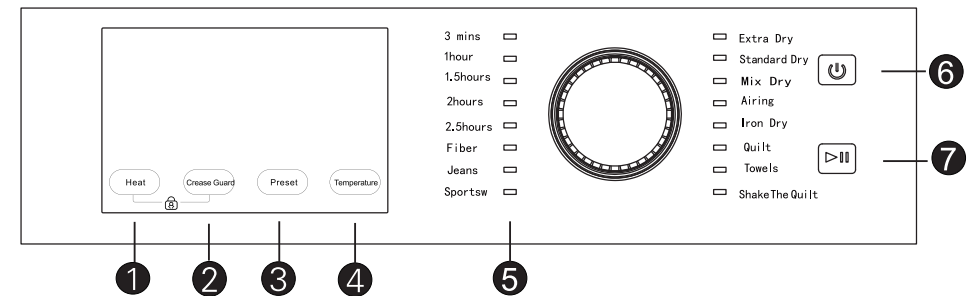

1.Heat (Full、 Half、 Airing)

2.Crease guard

3.Preset

4.Temperature

5. PROGRAM

6.Power

7. Start/Pause



- 1) Switch on by pressing the **Power** button.
- 2) If the **Filter** button flashes, it means to clean the Lint Filter.
After you clean the Lint Filter, close the Dryer door and press **Start / Pause** button. The light should turn off.
- 3) Decide on a program (see diagram below) according to the texture and capacity of the clothes.

Program	Max volume of dry clothings	Max dry time	Clothing type
Extra Dry	6.0kg	150min	Wool
Standard Dry	5.0kg	90min	Wool
Mix Dry	5.0kg	90min	Wool / Synthetic
Airing	5.0kg	80min	Unheated / To freshen up
Iron Dry	5.0kg	90min	Unheated / To freshen up
Quilt	5.0kg	120min	Semi dry clothes
Towels	4.0kg	90min	Dry towels
Shake The Quilt	4.0kg	120min	Dry (Shake the quilt)
Sportswear	4.0kg	90min	Dry (Sportswear)
Jeans	5.0kg	120min	Dry (Jeans)
Fiber	5.0kg	120min	Chemical fiber
2.5hours	6.0kg	150min	Wool
2 hours	5.0kg	120min	Wool
1.5hours	4.0kg	90min	Small clothes
1 hour	2.0kg	60min	Not dry clothes
30 mins	1.0kg	30min	Fiber wool

**** Select the "Extra Dry" program with full heat for clothes under 2.0 kg.**

- 4) Press the **Crease Guard** button if you are drying delicate or light clothes.
**** Crease Guard adds an extra 30 seconds run to shake clothes in order to protect from creasing.**

5) Push **Start / Pause** button to start desired program. If you wish to pause the cycle to add more clothes, push the **Start / Pause** button again. Be careful with hot steam when opening the Dryer door. To continue program, make sure the door is closed then push the **Start / Pause** button once again. When the Dryer is in Pause Mode, it is possible to change or restart programs.

6) Control panel lock feature is initialized by pushing both **Crease Guard** and **Heat** buttons at the same time. When the lock feature is enabled, it is indicated by a light. Pushing both buttons again will disable this feature.

7) If the unit does not heat up, push the **Reset** button located at the back of the unit.



8) During the operation of the Dryer, you can click the the **Temperature Display** button to view the current temperature of the Dryer. This function will exit automatically after 5 seconds.

**** Check label attached on clothes to choose the right temperature and time.**

9) You can preset between 1 hour to 12 hours. Just press the **Preset** button and add desired time.

10) A buzzer will signify that the program has ended and clothes are ready to be taken out of the Dryer.

 
11) To be safe, unplug the unit after each use.

12) Clean Lint Filter, the cabinet and the inner tube. (Accumulated dust and fiber will affect air circulation which will cause longer drying time.)

*** Make sure the power is off before cleaning.**

Cleaning the Lint Filter

- 1) Remove Lint Filter
* The Lint Filter is located at the door's opening.
- 2) Clean the filter by wiping it down with a damp cloth.
- 3) Once the filter is dry, return the filter to its original position.
- 4) Remember to clean the filter after every use.

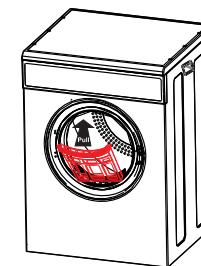

Cleaning Cabinet and Inner Tube

Use a damp cloth to wipe the cabinet and inner tube.

- do not rinse by water directly
- do not use scour wipes
- do not use gasoline and alcohol wipes



Make sure to open the Dryer's door for aeration after cleaning the inner tube.



● **Warning function**

Fault	Cause	Solution
Buzzer sounds every 15 minutes	The Dryer door is open or has opened during the program.	Make sure to firmly and properly close the door.

● **Auto power-off function**


* The Dryer will automatically switch off after 10 minutes of not setting any program.

* The Dryer will automatically switch off after the buzzer goes off six times.



Trouble	Cause	Solution
Dryer won't start	<ul style="list-style-type: none"> ◆ Power cut ◆ Power plug not correctly connected ◆ Clothes exceed maximum volume 	<ul style="list-style-type: none"> ◆ Wait for power to restore ◆ Check the power socket and make sure plug is connected tight ◆ Remove clothes and check dampness. Max volume of the dryer is 9 kg
Dryer releasing extensive heat	<ul style="list-style-type: none"> ◆ Lint filter needs cleaning ◆ Intake or exhaust passage is obstructed 	<ul style="list-style-type: none"> ◆ Clean lint filter ◆ Clean air intake and exhaust and check for obstructions. (eg. Curtain)
Wet clothes	<ul style="list-style-type: none"> ◆ Dryer too full ◆ Clothes left in dryer too long after the end of the program ◆ Clothes not sorted out properly ◆ Wrong temperature for clothes 	<ul style="list-style-type: none"> ◆ Make sure the dryer is not too full ◆ Immediately remove clothes once program finishes ◆ See page 7 ◆ Observe the maintenance label on clothes
Clothes have shrunk	<ul style="list-style-type: none"> ◆ Clothes are overtly dried 	<ul style="list-style-type: none"> ◆ Observe the maintenance label on clothing. Remove clothes from dryer while still damp, finish drying process by hang drying
Lint balls on clothing	<ul style="list-style-type: none"> ◆ Synthetic fiber rubbing with each other causes lint which attaches to clothes 	<ul style="list-style-type: none"> ◆ Use fabric softener

 - If there is no heat from the Dryer, press the plastic push button at the back of the Dryer to activate the thermostat which will reheat the element. (see illustration)

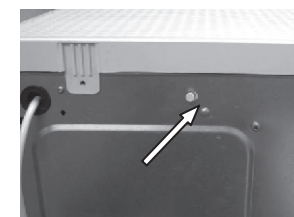

- The Dryer may produce excessive noise from the vibration of heavy clothes turning and spinning.
- When in cycle, the Dryer may generate steam which will come out of the exhaust pipe. This may also cause certain movements at the bottom of the inner tube.



- If the drying process can operate while the door is open it should be sent to maintenance.
- If the drying process can operate without pushing the "START/PAUSE" button, it should be sent to maintenance.
- This dryer is not intended to be placed on top of a washing machine.

Specifications

Dimension	595 x 525 x 840(mm)	Weight of product	31 kg
Rated input power	1700W	Rated volume of dryer	7.0 kg (Dry clothes)
Rated voltage	220-240V~	Rated frequency	50-60 Hz

This appliance must not be plugged in to an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off.



12 MONTHS WARRANTY CARD

This product is covered by a 12 month replacement or repair warranty, which is in addition to your rights under the Australian Consumer Law (if your product was purchased in Australia) or New Zealand Consumer Guarantees Act (if your product was purchased in New Zealand).

Upon receipt of your claim, Airflo will seek to resolve your difficulties or, if the product is defective, advise you on how to obtain a replacement or refund.

In order to make a claim under our warranty, you must have the original proof of purchase documentation for the product and present it when requested.

Should your product develop any defect within 12 months of purchase because of faulty materials or workmanship, we will replace or repair it, at our discretion, free of charge. A product presented for repair may be replaced by a refurbished product of the same type rather than being repaired. Refurbished parts may be used to repair the product.

Our replacement or repair warranty only applies where a defect arises as a result of faulty material or workmanship during the warranty period. Your warranty does not cover misuse or negligent handling (including damage caused by failing to use the product in accordance with the instruction manual), accidental damage, or normal wear and tear.

Your warranty does not:

- cover freight or any other costs incurred in making a claim, consumable items, accessories that by their nature and limited lifespan require periodic renewal (such as filters and seals) or any consequential loss or damage; or
- cover damage caused by:
 - > power surges, power dips, voltage supply problems, or use of the product on incorrect voltage;
 - > servicing or modification of the product other than by Airflo or an authorised Airflo service centre;
 - > use of the product with other accessories, attachments, product supplies, parts or devices that do not conform to Airflo specifications; or
 - > exposure of the product to abnormally corrosive conditions.

THE BENEFITS given to you by our warranty are in addition to other rights and remedies under law in relation to the product.

In Australia our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Our goods also come with guarantees that cannot be excluded under the New Zealand Consumer Guarantees Act.

If your warranty claim is not accepted, we will inform you and if requested to do so by you, repair the product provided you pay the usual charges for such repair. You will also be responsible for all freight and other costs.

Important:

You must keep the purchase receipt with this warranty card for the warranty to be valid. This product is covered under warranty for domestic usage only.

DO NOT MAIL. Keep this with your original purchase documents.



Complete the details below and **keep this** with your original purchase documents for any claim under warranty. If you have any queries or require further information on your Airflo product please contact AIRFLO DISTRIBUTORS (☎ 03 93599799).

CUSTOMER NAME: _____

ADDRESS: _____

MODEL NO.: _____

STORE OF PURCHASE: _____

DATE OF PURCHASE: _____