



Quick Start Guide



Model:
VTech 17450

For product support
please call: 1 300 369 193

GOT EVERYTHING?

The package contains the following items:

- VTech 17450 handset
- VTech 17450 base unit
- Power adaptor
- Telephone line cord and adaptor
- Battery compartment cover
- 3 x AAA rechargeable batteries
- Wall mount bracket
- User guide
- Quick start guide


If you have purchased a multi-handset pack there will be an extra handset, charger, power adaptor, and three AAA rechargeable batteries for each additional handset.

CONNECT


NOTES

- Use only the adaptors provided.
- Make sure the electrical outlets are not controlled by wall switches.
- The adaptors are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.


CONNECT THE TELEPHONE BASE

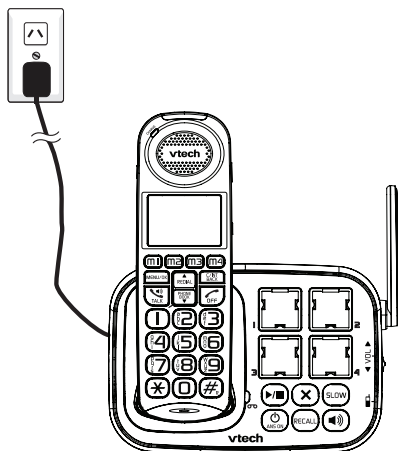

CONNECT THE HANDSET CHARGER (FOR 17450 MULTI-HANDSET PACKS ONLY)

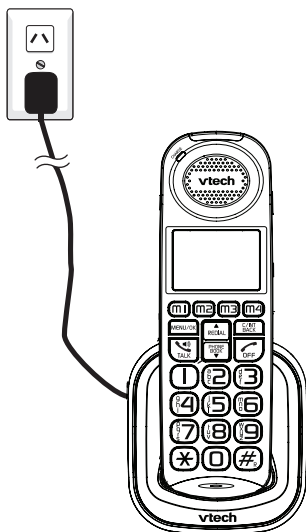

INSTALL THE HANDSET BATTERY

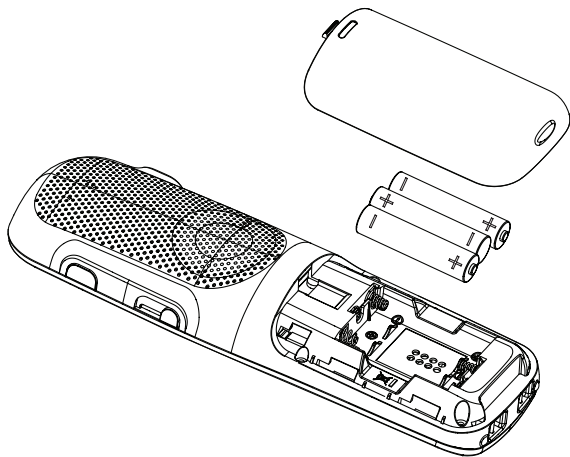

1. Slide open the battery compartment cover.
2. One by one, insert 3 AAA batteries into the battery compartment, according to the polarity.
3. Slide the battery compartment cover back into place, until you hear a click sound.

NOTES

- Use only the batteries provided.
- If the handset will not be used for a long time, disconnect and remove the batteries to prevent possible leakage.

CHARGE THE BATTERIES

Place the handset in the telephone base to charge.

DATE AND TIME SETTINGS

You will need to set the correct time and date so that you know when you received answering machine (applicable to model with answering machine) or call log entries.

SET THE DATE FORMAT

1. Press **MENU/OK** and ▲/▼ to select **HS SETTINGS**.
2. Press **MENU/OK** and ▲/▼ to select **CLOCK**.
3. Press **MENU/OK** and ▲/▼ to select **DATE FORM**.
4. Press **MENU/OK** and ▲/▼ to select your desired date format (**DD-MM-YY** or **MM-DD-YY**).
5. Press **MENU/OK** to confirm.

SET THE TIME FORMAT

1. Press **MENU/OK** and ▲/▼ to select **HS SETTINGS**.
2. Press **MENU/OK** and ▲/▼ to select **CLOCK**.
3. Press **MENU/OK** and ▲/▼ to select **TIME FORM**.
4. Press **MENU/OK** and ▲/▼ to select your desired time format (**12 HR** or **24 HR**).
5. Press **MENU/OK** to confirm.

SET THE DATE AND TIME

1. Press **MENU/OK** and ▲/▼ to select **HS SETTINGS**.
2. Press **MENU/OK** and ▲/▼ to select **CLOCK**.
3. Press **MENU/OK** and ▲/▼ to select **SET DATE**.
4. Press **MENU/OK** then enter the date according to **DD-MM-YY** or **MM-DD-YY** format. The date will be in the format you set.
5. Press **MENU/OK** then enter the time information according to **12 HR** or **24 HR** format. The time will be in the format you set.
6. Press **MENU/OK** to confirm.

ANSWERING MACHINE ANNOUNCEMENT

The announcement is the message a caller first hear when the answering machine answers their call. There is a pre-recorded announcement message or you can record your own.

RECORD YOUR OWN ANNOUNCEMENT

1. Press **MENU/OK** when the phone is not in use. Then, press ▲ / ▼ to scroll to **ANS. SYS.**
2. Press **MENU/OK** and ▲ / ▼ to scroll to **SET TAM.**
3. Press **MENU/OK** and ▲ / ▼ to scroll to **TAM MSG.**
4. Press **MENU/OK** and ▲ / ▼ to scroll to **RECORD.**
5. Press **MENU/OK**. The handset displays **RECORDING....** Now speak into handset to record your message.
6. Press **MENU/OK** to confirm your selection.

SOS EMERGENCY CALLS

You need to set the SOS numbers before you can make SOS Emergency Calls.

PROGRAM THE SOS NUMBER

1. Press **MENU/OK** when the phone is not in use, and then press **▲/▼** to scroll to **SET SOS**.
2. Press **MENU/OK** and **▲/▼** to scroll to **SOS NUMBER**.
3. Press **MENU/OK** and **▲/▼** to scroll to **SOS 1, SOS 2, SOS 3, SOS 4, or SOS 5**.
4. Press **MENU/OK** twice to select **ADD**.
5. Enter the SOS emergency number, and then press **MENU/OK**.
6. Enter the name for the SOS emergency number, and then press **MENU/OK**.

RECORD YOUR SOS MESSAGE

The SOS message is your own recorded message to be played directly when you make an emergency call. The default SOS message is *“This is an emergency call.*

Please press any number key to start the conversation.”

You can record your own message using the handset.

Make sure your SOS message recorded includes **your name, the SOS message, and a request to far end on pressing any number key to start the conversation.** You can also playback and listen to your SOS message or delete it.

1. Press **MENU/OK** when the phone is not in use, and then press ▲/▼ to scroll to **SET SOS**.
2. Press **MENU/OK** and ▲/▼ to scroll to **SOS MSG**.
3. Press **MENU/OK** and ▲/▼ to scroll to **RECORD**.
4. Press **MENU/OK** and the handset displays **RECORDING**. Now speak into handset to record your message.
5. Press **MENU/OK** to confirm.

V VTech is the registered trademark of VTech Holdings Limited.
Copyright © 2018 for VTech Telecommunications (Australia).
All rights reserved. Printed in China.
Version 2

FOR MORE INFORMATION CALL:
TECHELP ON 1300 369 193 OR
EMAIL: TCPSUPPORT_AU@VTECH.COM

vtech[®]