

DCPF40C

40cm High Velocity Pedestal Fan



INSTRUCTION MANUAL

PLEASE READ THE INSTRUCTION MANUAL CAREFULLY BEFORE USING THE UNIT.

WARNINGS AND PRECAUTIONS	1
STRUCTURE	3
OPERATION	4
CLEANING AND MAINTENANCE	6
TECHNICAL REFERENCE DATA	8
WARRANTY	8

Warnings

- Never place the unit near gas appliances, flames or
- Flammable liquids.
- Never hit or shake the unit. Doing so may cause damage.
- Never cover or obstruct the air inlet or outlet.
- Doing so may cause overheating.
- Never spray water on or place the unit near water.
- Doing so may cause electric shock.
- Never connect other appliances to the same power outlet.
- Never connect or disconnect the power plug with wet hands.
- Doing so may cause electric shock.
- Never insert fingers or objects through the guards when the unit is operating.
- Never use an extension cord.
- Always have a professional technician, manufacturer or service agent replace a damaged power cord.

Precautions


- This appliance is for indoor use only.
- Do not use the unit near windows or where water collects. Rain and water collection may lead to a risk of fire or electric shock.
- Do not place the unit in a damp place or where humidity is high (such as a bathroom).
- Do not leave the unit operating while unattended.
- Do not place the unit in direct sunlight to avoid surface discolouration.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Avoid electromagnetic interference. Keep the unit at least 1 metre away from electric appliances such as televisions and radios.
- Avoid scratching and damaging the surface. Do not use chemical solvents (i.e. Benzene, alcohol) to clean the surface.
- Place the unit on a stable surface when operating.
- Unplug the unit before cleaning, servicing or maintenance.
- Electrical connections must be in accordance with National or
- Local Codes.
- The rear of the unit must be at least 50cm away from the wall.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

STRUCTURE



- | | |
|----------------------|-----------------------|
| 1. Front grille | 10. Power cord & plug |
| 2. Blade locking cap | 11. Fixing screw A |
| 3. Blade | 12. Upper pillar |
| 4. Guard knob | 13. Fixing screw B |
| 5. Rear grille | 14. Main pillar |
| 6. Motor shaft | 15. Base |
| 7. Rotary switch | 16. Pole fixing nut |
| 8. Oscillation knob | 17. Safety screw |

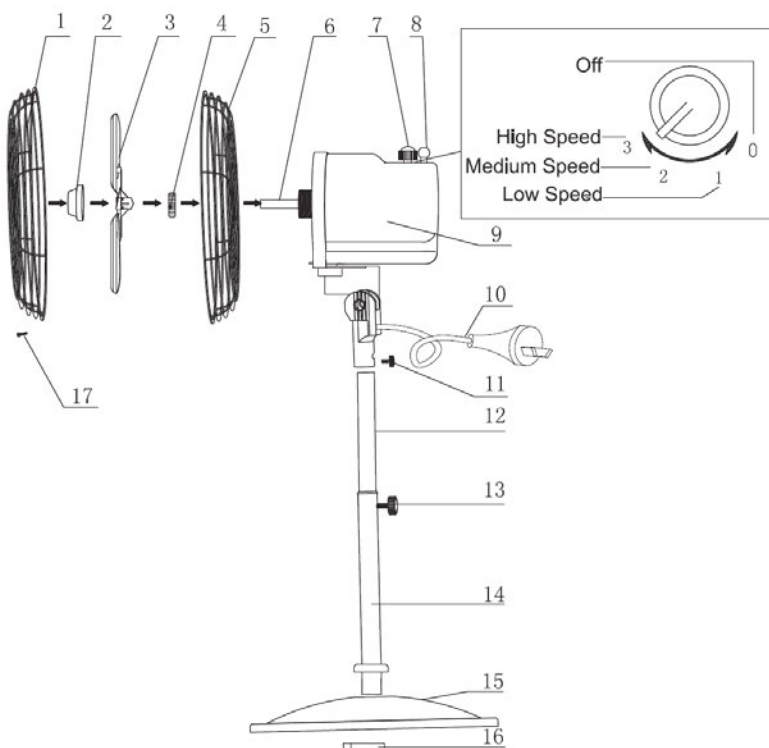

BEFORE FIRST USE

- Please read these instructions carefully before use and keep them for future reference.
- Check your local main voltage whether it is the same as stated on the appliance.
- Before using for the first time, remove any protective films or stickers from the appliance and ensure the power switch is in the "0" position.

ASSEMBLY

1. Remove the pole fixing nut (16) from the main pillar (14) and insert the main pillar (14) into the base (15) then tighten the fixing nut (16).
2. Release fixing screw B (13) and adjust height to a suitable length. Retighten the fixing screw B once ready.
3. Release the fixing screw A (11), connect the motor housing with the upper pillar (12), fasten it with the fixing screw A (11).
4. Remove the blade locking cap (2) and the guard knob (4) from the motor shaft (6), secure the rear guard (5) on the motor housing (9) to line up with the three fixing pins, fasten the guard with the guard knob (4).
5. Put the blade (3) on the motor shaft (6) and tighten with the blade locking cap (2).
6. Attach the front guard (1) to the rear guard (5), and close the guard fixing clips, finally fastening with the safety screw (17).

Connect the plug to a power supply and switch on the power.

On/Off

- Switch the fan on by rotating the speed control knob (7) at the rear in clockwise direction. The switch is also used to adjust the fan speed from LOW "1" – MEDIUM "2" - HIGH "3" in sequence.
- The airflow direction can be adjusted upward/downward by lifting up or pressing down the motor housing. NOTE: Only adjust the fan head when the unit is OFF. Be careful not to insert your fingers through the guard.
- Push the oscillating knob (8) down to start oscillation. Pull the oscillation knob up to stop oscillation.
- Turn the switch anti-clockwise to the "0" position to turn the fan OFF.

Speed

- Turn speed control knob (7) to adjust the fan speed from LOW "1" – MEDIUM "2" - HIGH "3" in sequence. Turn the switch anti-clockwise to the "0" position to turn OFF.

CLEANING

Over time, dust can accumulate on the rear grille cover and fan blades, which can affect the fans performance. It is recommended to clean the fan at least once a month.

1. Turn the unit OFF and disconnect the appliance from the main power supply.
2. Remove any dust build up with a soft brush.
3. Wipe the surface of the unit with a soft damp cloth. Mild detergent can be used for any stubborn marks.
4. Do not allow the motor or other electrical parts to come in contact with water.
5. Do not use abrasive sponges, scouring pads, or a stiff brush to clean the appliance.
6. When the fan is not being used for long periods, it's recommended to store the fan in its original box in a low humidity environment.

IMPORTANT

The control panel and other parts must not come into contact with water or any other liquids.



- Do not dispose of electrical appliances as unsorted municipal waste.
- Use separate collection facilities.
- Contact your local government for information regarding the collection systems available.

- If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the ground water, polluting the food chain and damaging health and well-being.

MAINTENANCE

If the unit fails to operate efficiently, is broken or other problems arise, unplug and do not operate. Ask for advice by calling your local after sales service agent or the Customer Care Centre on 1300 556 816 (AU) / 0800 666 2824 (NZ).

MODEL NO.	DOPF40C
Rated Power	60W
Voltage/Frequency	220-240V/50Hz
Net Weight	5.6kg
Dimensions Body (HxWxDmm)	1250 x 450 x 410
Dimensions Packaging (HxWxDmm)	587 x 470 x 130
RCM	5336

WARRANTY

The warranty period is 12 months from the date of purchase. For service advice, please contact the Customer Care Centre on 1300 556 816 (AU) / 0800 666 2824 (NZ).

Glen Dimplex Australia Pty Ltd
1340 Ferntree Gully Road,
Scoresby 3179, Victoria
Australia
Ph: 1300 556 816

Glen Dimplex New Zealand Ltd
38 Harris Road, East Tamaki,
Auckland 2013
New Zealand
Ph: 0800 666 2824