


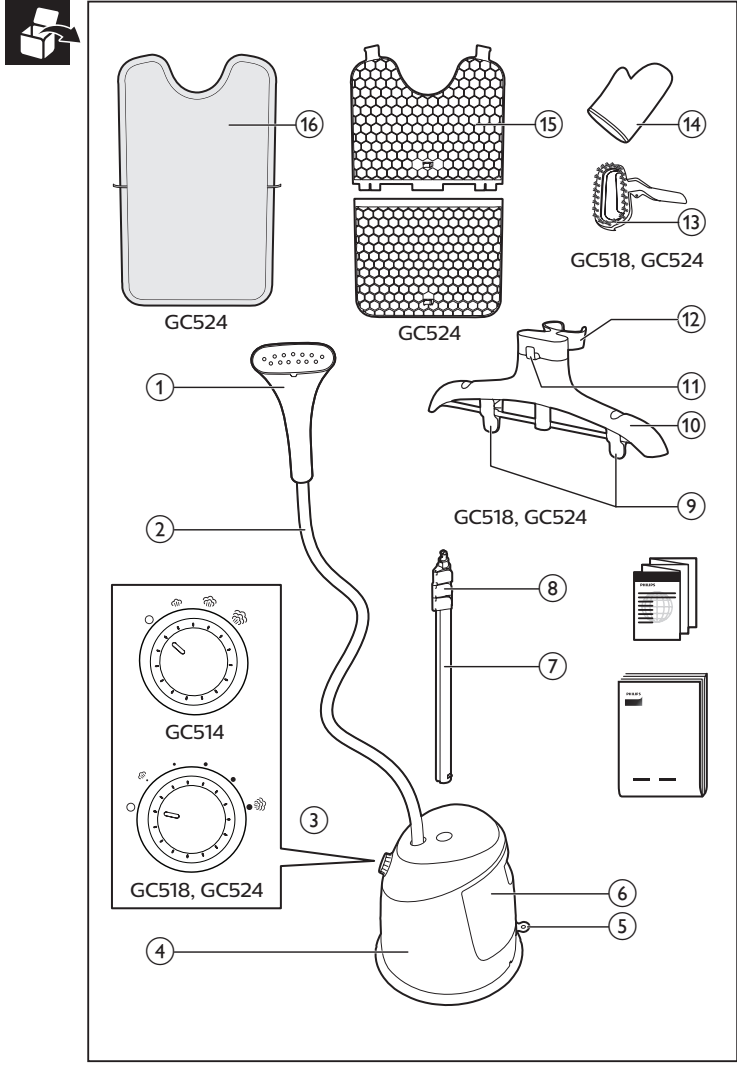

① Kepala penyembur uap	⑩ Gantungan
② Selang pasokan uap	⑪ Kait gantungan
③ Tombol uap	⑫ Penahan kepala penyembur uap
④ Alas	⑬ Pembuat lipatan dan sikat (GC518, GC524)
⑤ Kenop de-calc	⑭ Sarung tangan
⑥ Tangki air	⑮ Papan (GC524)
⑦ Tiang	⑯ Penutup papan (GC524)
⑧ Klip kunci tiang	
⑨ Jepit celana (GC518, GC524)	

! PERHATIAN: Air panas!


1

GC514

GC518, GC524

2

~ 45 sec.

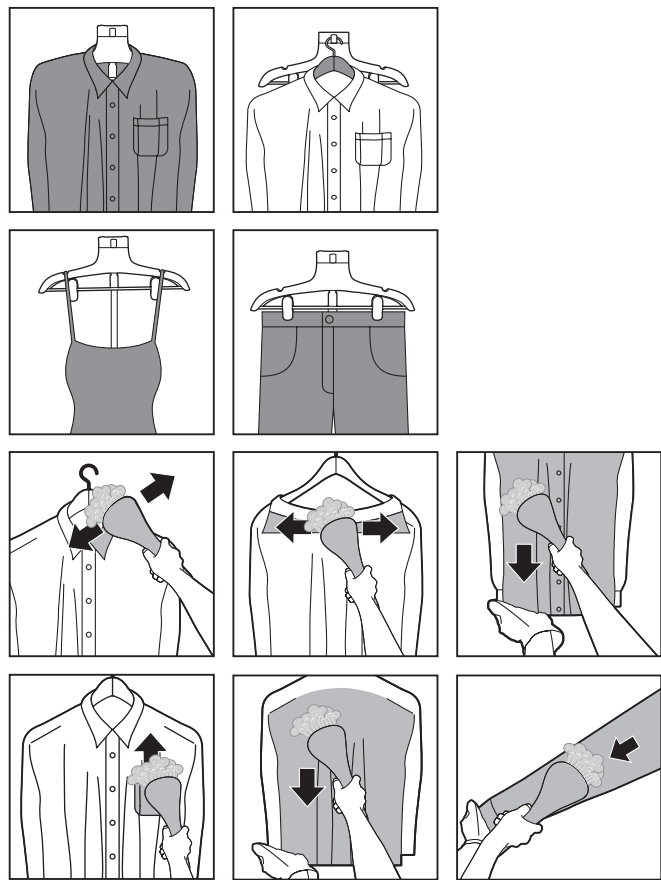


GC518
GC524

The diagram illustrates the four steps of the hair removal process:


- Step 1:** Preparing the device. The user is shown holding the device and adjusting the settings using the buttons on the side.
- Step 2:** Applying the device to the skin. The user is shown holding the device against the skin, with a small area of skin being treated.
- Step 3:** Adjusting the device. The user is shown holding the device and adjusting the settings using the buttons on the side. The diagram also shows a close-up of the device's head and a warning symbol (X) indicating that the device should not be used on sensitive areas.
- Step 4:** Removing the device. The user is shown holding the device and removing it from the skin.

The diagram illustrates the 7 steps for using the steam mop:

- 1** Turn the dial to the 'ON' position (indicated by an arrow pointing to the 'ON' mark).
- 2** Plug the power cord into a standard wall outlet.
- 3** The temperature gauge shows a transition from Fahrenheit (°F) to Celsius (°C), indicating the temperature is set to approximately 10 minutes.
- 4** Use the steam mop head to clean the floor surface.
- 5** The mop head is shown cleaning a floor surface.
- 6** The mop head is shown cleaning a floor surface.
- 7** A person is shown using the steam mop to clean a floor.

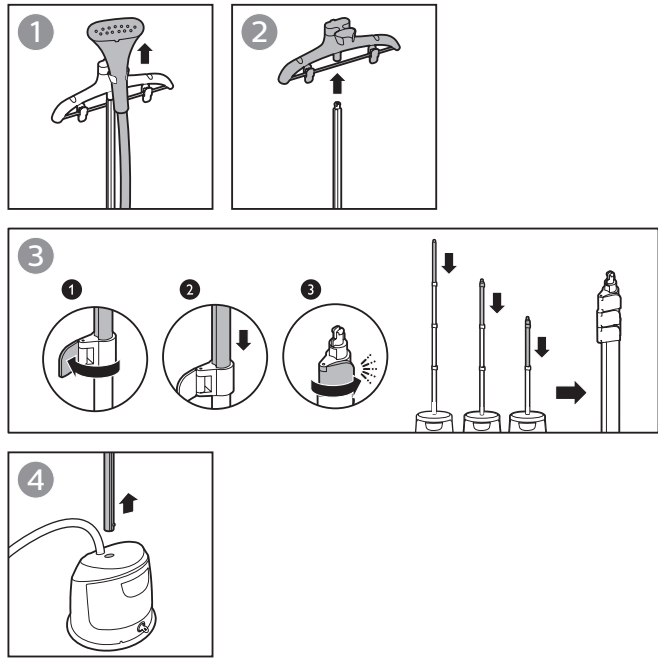

ID	Masalah	Kemungkinan penyebab	Solusi
	Alat tidak mengeluarkan uap atau uap tidak teratur.	Penyembur uap tidak cukup panas.	Biarkan alat memanaskan selama kurang lebih 45 detik.
		Uap mengembun dalam selang.	Angkat kepala penyembur uap untuk meluruskan selang secara vertikal. Ini memungkinkan kondensasi mengalir kembali.
		Tingkat air di dalam tangki rendah atau tangki tidak terpasang dengan benar.	Isi ulang tangki air dari pasang dengan benar.
		Terlalu banyak karak terbentuk di dalam alat.	Menjalankan proses calc-clean. Lihat bagian 4.6
	Titik air menetes dari kepala penyembur uap atau alat mengeluarkan bunyi menguak.	Anda meletakkan kepala penyembur uap dan/atau selang pasokan uap pada posisi horizontal dalam waktu lama.	Angkat kepala penyembur uap untuk meluruskan selang secara vertikal. Ini memungkinkan kondensasi mengalir kembali.
		Bila sedang membentuk huruf U, kondensasi di dalam selang tidak dapat mengalir kembali ke dalam tangki air.	Angkat kepala penyembur uap untuk meluruskan selang secara vertikal. Ini memungkinkan kondensasi mengalir kembali.
	Terlalu banyak air menetes keluar dari kepala penyembur uap saat alat sedang memanaskan.	Air di dalam alat kotor atau terlalu lama berada di dalam alat.	Menjalankan proses calc-clean. Lihat bagian 4.6
	Air keluar dari alas penyembur uap.	Anda belum menutup tutup tangki air atau kenop de-calc dengan kencang.	Tutup tangki air atau kenop de-calc dengan kencang.
		Tangki air tidak dipasang dengan benar.	Masukkan tangki dengan benar.

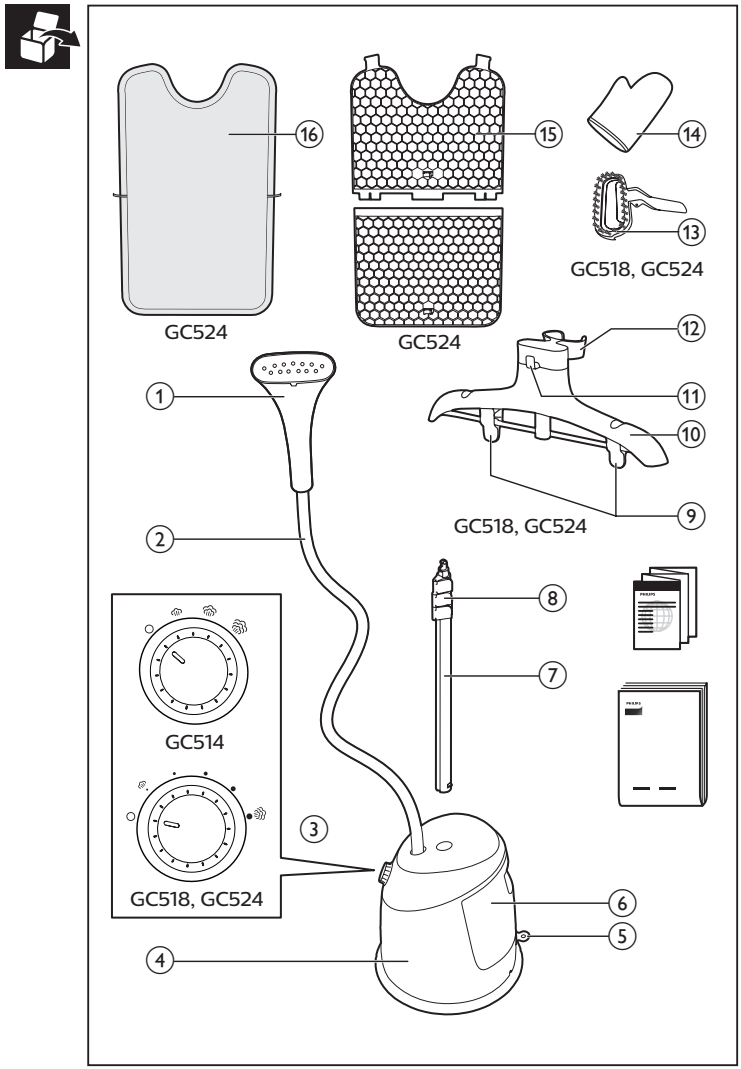


EN

General description

- 1 Steamer head
- 2 Steam supply hose
- 3 Steam dial
- 4 Base
- 5 De-calc knob
- 6 Water tank
- 7 Pole
- 8 Pole lock clip
- 9 Pants clip (GC518, GC524)
- 10 Hanger
- 11 Hanger hook
- 12 Steam head holder
- 13 Pleat maker and brush (GC518, GC524)
- 14 Glove
- 15 Board (GC524)
- 16 Board cover (GC524)



EN Important

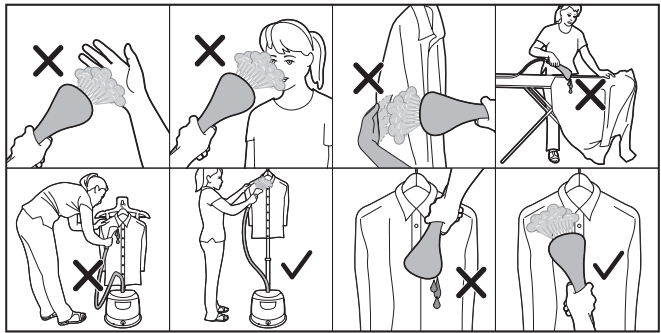

EN Do not use your bare hand as a supporting surface when you steam.

Do not use the appliance on an ironing board at a low position where the hose forms a U-shape, or do not hold the steamer head upside down. Otherwise, condensation in the hose cannot flow back into the water tank. This may cause irregular steam, water dripping from the steamer head and/or a croaking sound.

English

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Important

Read this important information carefully before you use the appliance and save it for future reference.

Danger

- Never immerse the appliance in water or any other liquid, nor rinse it under the tap.

Warning

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Do not use the appliance if the plug, mains cord or the appliance itself shows visible damage, or if the appliance has been dropped or leaks.
- Do not connect the appliance to a direct current supply.
- Always return the appliance to a service centre authorised by Philips for examination or repair. Do not attempt to repair the appliance yourself, otherwise the guarantee becomes invalid.
- If the mains cord is damaged you must have it replaced by Philips, a service centre authorized by Philips or similarly qualified persons in order to avoid a hazard.
- Never leave the appliance unattended when it is connected to the mains.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- When you have finished steaming, when you fill or empty the water tank, when you perform cleaning and rinsing and when you leave the appliance even for a short while, remove the mains plug from the wall socket.
- Keep the appliance and its mains cord out of reach of children.
- Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Only connect the appliance to an earthed wall socket.
- Do not open the de-calc knob when the appliance is ON. Follow instruction manual recommendation on the cooling time before opening.
- Do not place the appliance on a surface with the steamer head touching the surface while the appliance is hot or connected to the mains.
- Do not let the mains cord come into contact with hot steam when the appliance is in operation.
- Keep the water tank closed after filling it and while using the appliance.
- The plug must be plugged to a power outlet of the same technical characteristics of the plug only.
- Do not shake the steamer head while the appliance is in operation.

Caution

- Check the mains cord regularly for possible damage.
- Beware of hot steam and hot water that comes out from steamer nozzle during use. Steam and hot water can cause burns. Care should be taken when using the appliance due to the emission of steam.
- The nozzle of steamer head can become extremely hot and may cause burns if touched.
- Unplug the appliance during filling and cleaning.
- This appliance is intended for household use only.
- Never drag or pull the appliance across the floor.
- Do not place the steamer base on top of table or chair but rather keep the steamer base on the floor during usage duration.
- If the hose forms a U shape, steam condenses in the hose. This causes irregular steam or water droplets to come out of the steamer head.
- Steam may damage or cause discolouration of certain wall or door finishes.
- Do not use the appliance when the water tank is empty.
- Do not open the de-calc knob when the appliance is ON. Follow instruction manual recommendation on the cooling time before opening.

CAUTION: Hot water !

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Recycling


- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Guarantee & Service

If you need information or support, please visit www.philips.com/support or read the separate worldwide guarantee leaflet.




EN Assembly

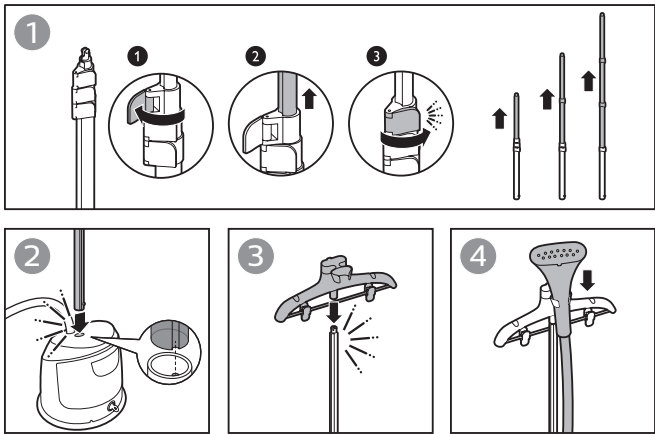

EN Open the pole lock clip to extend the pole. Insert the pole to the base until you hear a 'click' sound to indicate pole is securely locked to its base. Pole height can be adjusted accordingly. Dock the hanger top to the pole and the steamer head can be docked to its holder.



EN Accessory - Board (GC524)

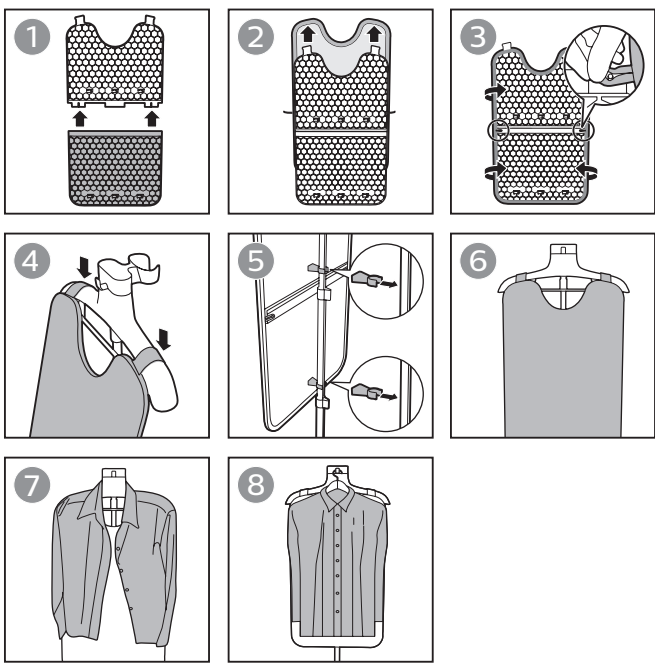


EN The board provides backing support to enhance the steaming performance.

Wear the board cover onto the board. Tighten the board cover by hooking the side elastic band to the nearest guide provided. Place the board onto the hanger and fit it to the pole.

Note: Do not wash the board cover as it may damage the foam material



EN Filling the water tank

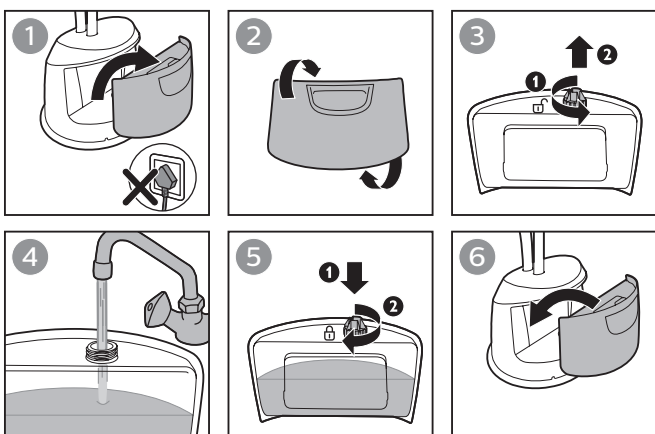


EN Your appliance has been designed to be used with tap water. In case you live in an area with hard water, fast scale build-up may occur. Therefore, it is recommended to use water without minerals such as distilled or purified water to prolong the lifetime of your appliance.

Take the water tank out of the base and turn it around to remove the filling cap. After filling water into the tank, tighten the cap and place the tank back to its base.

Note: Do not add perfume, vinegar, mineral water, starch, descaling agents, ironing aids, chemically descaled water or other chemicals as they may cause water spitting, brown staining, or damage to your appliance.



EN Heating up and steam setting

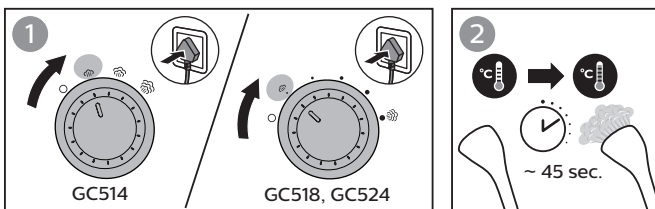


EN Multi steam settings are provided to save water and energy. You can increase the steam setting for more steam power at any point of time. The appliance is safe to use on all fabrics at any setting.

Note: The steam supply hose becomes warm during steaming. This is normal.



EN Steaming clothes

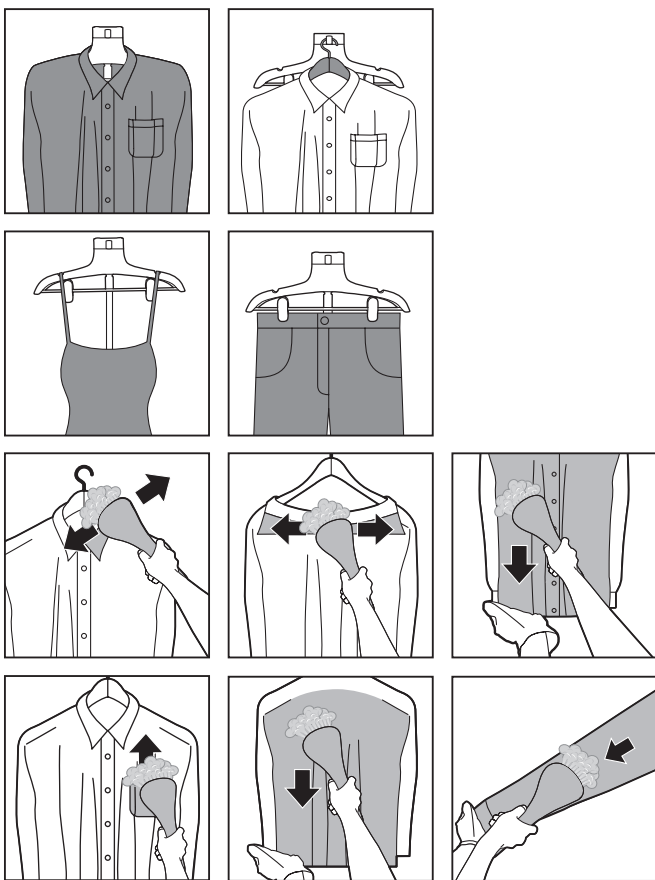

EN You can either wear over the garment onto the hanger or directly hang a garment on a hanger onto the hook provided.

When you are steaming, press the steamer head against the garment, and pull the sides of the garment with your other hand to stretch it.


Move the steamer head horizontally along the collar.

For shirt pockets, move the steamer head upwards against the fabric.

To steam sleeves, start from the shoulder area and move the steamer head downwards. Steam while you pull the sleeve diagonally down with the other hand.



EN Accessory - Glove

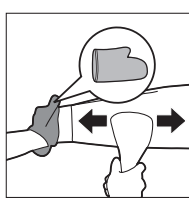


EN Put the glove on the hand you are using to hold a garment. The glove protects your hand against the steam from the steamer head.



EN Accessory - Pleat maker


GC518
GC524

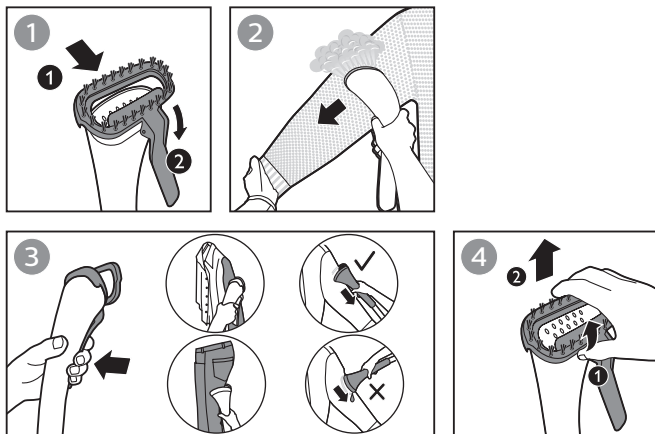

EN **Caution:** Do not attach or detach the brush/pleat maker while the steam is on or the steamer head is hot.



EN Cleaning and maintenance

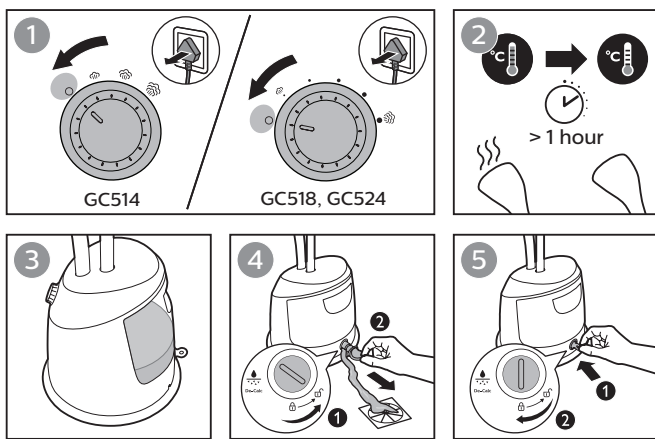


EN To maintain optimal steam performance and prolong the lifetime of the appliance, it is important to remove scales and impurities inside the appliance regularly. Therefore, it is recommended to perform the de-calc process at least once a month.

Before you start de-calc process, make sure there is some water in the water tank.

Unplug the appliance and let it cool down. Remove De-Calc knob to drain the water out. Tighten De-Calc knob back to its place once completed.



EN Storage

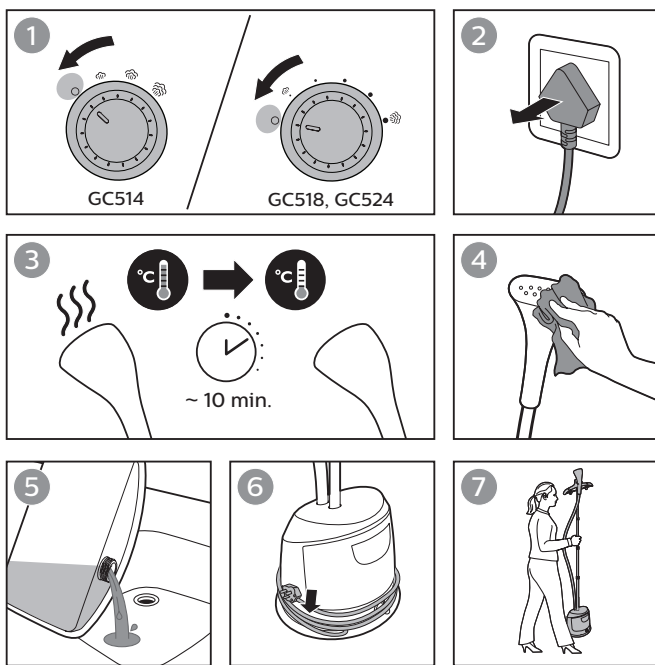


EN **Note:** Clean the appliance and wipe any deposits off the steamer head with a damp cloth and non-abrasive liquid cleaning agent. Always empty the water tank after usage, to prevent calc build-up and maintain good steam performance.

Wind the mains cord around the base and carry the appliance by the pole for easy transportation.



EN Disassembly

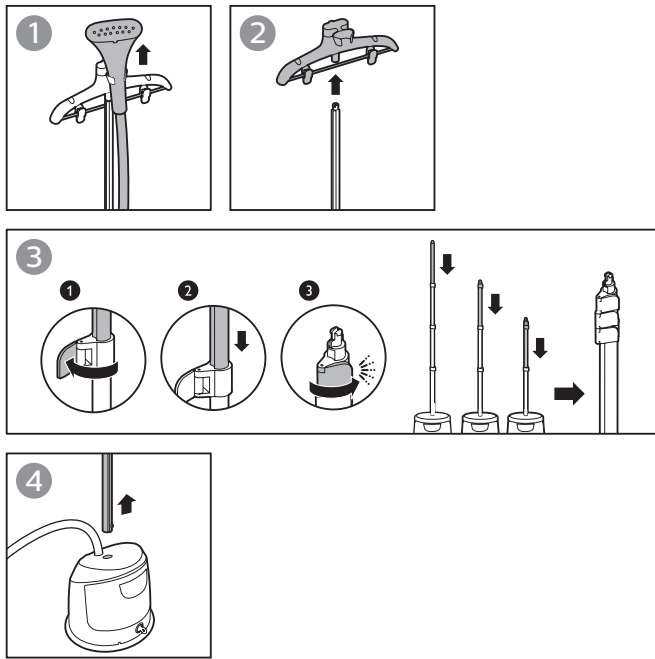

EN Remove the steamer head from its docking and pull out the hanger top. Open the pole lock clip and press the pole down in each segment. Close the pole lock clip back to its place. Remove the pole from its base.

Note: Ensure that pole is closely collapsed without any gap in between pole lock clips to remove the pole from its base.



EN	Problem	Possible cause	Solution
	The appliance produces no steam or irregular steam.	The steamer has not heated up sufficiently.	Let the appliance heat up for approximately 45 seconds.
		Steam has condensed in the hose.	Lift the steamer head to straighten the hose vertically. This allows any condensation to flow back.
		Low water level in the tank or the tank is not inserted properly.	Refill the water tank and insert it properly.
		Too much scale has built up in the appliance.	Perform calc-clean process. Refer to
	Water droplets drip from the steamer head or the appliance produces a croaking sound.	You have left the steamer head and/or the steam supply hose in horizontal position for a long time.	Lift the steamer head to straighten the hose vertically. This allows any condensation to flow back.
		When the hose forms a U-shape, condensation in the hose cannot flow back into the water tank.	Lift the steamer head to straighten the hose vertically. This allows any condensation to flow back.
	An excessive amount of water drips out of the steamer head when the appliance is heating up.	The water in the appliance is dirty or has been left inside the appliance for a long time.	Perform calc-clean process. Refer to
	Water leaks out from the steamer base.	You have not closed the water tank cap or de-calc knob securely.	Close the water tank cap or de-calc knob securely.
		The water tank is not inserted properly.	Insert the tank properly.

SETRIKA UAP VERTIKAL

Model: GC518, GC524

Tegangan: 220-240V; 50-60Hz; 1350-1600W

Negara Pembuat: Cina

Diimpor oleh: PT Philips Indonesia Commercial
Jl. Buncit Raya kav 99,
Jakarta 12510, Indonesia

Reg. No: I.38.PIC2.01215.0517